

Rinnai hydronic furnaces and boilers use a different serial number format, with the first two letters of the serial number identifying the year and month of manufacture. Refer to the accompanying chart for the respective letters and matching month / year.

Rinnai hydronic furnace and boiler serial number format

Serial number will consist of 10 digits

Example: AD000123BA

First Digit = Alpha = Year of Manufacture

Second Digit = Alpha = Month of Manufacture

<u>Year</u>		<u>Year</u>		<u>Month</u>	
2009	A	2021	N	January	A
2010	B	2022	P	February	B
2011	C	2023	R	March	C
2012	D	2024	S	April	D
2013	E	2025	T	May	E
2014	F	2026	W	June	F
2015	G	2027	X	July	G
2016	H	2028	Y	August	H
2017	J	2029	Z	September	J
2018	K			October	K
2019	L			November	L
2020	M			December	M